



CAP ACR-375 Practice PLB Device

Quick-Reaction User Checklist

| | |
|---|--|
| ACR-375 P-PLB Device Activation or Utilization | |
| Un-latch Antenna and fully unwrap antenna to full upright position | |
| Place device lying flat with front facing the sky | |
| Rotate antenna vertical and perpendicular to device body | |
| Depress RED ON/OFF button for 1 full second | |
| Initial First Active Boot-up minute, Strobe flashes once a second & RED LED flashes every 3 seconds; GPS acquires location lock | |
| Activation 406 Radio and 121.775 Distress Transmission Mode, Strobe and RED LED flash once every 3 seconds | |
| Activation 406 Distress & GPS Transmission Mode to SARTSAT, Strobe and GREEN LED flash once every 3 seconds | |
| Note: GREEN LED also indicates dual transmission of 406 GPS data packet and 121.775 homing signal | |
| Do Not cover device, with anything | |
| Do Not hold device, set on flat stable surface | |
| Ensure GPS surface has clear view of sky (no thick tree canopy) | |
| ACR-375 P-PLB Device Power Down and Turn Off | |
| Depress RED ON/OFF button for 3 full seconds | |
| Place device in protective pouch or case or box when not in use | |
| Note: All 406 and homing transmission stop when LED lights stop | |
| All LED lights should stop blinking and go out | |
| Wrap Antenna back around device and Latch Antenna down | |
| Report malfunctions to NMW ES or SAR office | |
| ACR-375 P-PLB Device False Alarm Prevention | |
| Only SQTW qualified personnel use the device | |
| Ensure all LED lights are not illuminated | |
| Ensure the antenna is wrapped and locked down | |
| Do NOT test the device | |
| Report False Alert Activation to AFRCC Console by voice toll-free phone 800-851-3051 | |
| Also Report False Alert Activation to any NMW Staff Office such as ES or SAR or DC or Wing Admin or Unit Commander or ES Office | |
| Report device misuse to NMW ES or SAR office | |
| | |